



No.	Product Model#	Part Number	Description	Qty
1	BB9504-00	5610973001	Hex Cylinder Screw + Washer Assy	2
2	BB9504-00	3708776001	Limiting Plate	1
3	BB9504-00	3708775001	Guide Support	1
4	BB9504-00	3667839001	Compression Spring	1
5	BB9504-00	3667838001	Adjust Spring	1
6	BB9504-00	3134018001	Rubber Washer	1
7	BB9504-00	5650986001	Big Flat Washer	2
8	BB9504-00	3403439001	Belt adjusting handle	1
9	BB9504-00	3708766001	Bearing Cap	1
10	BB9504-00	5610961001	Phillips Screw	5
11	BB9504-00	3134016001	Support Cover	1
12	BB9504-00	5610960001	Phillips Screw	1
13	BB9504-00	5610957001	Phillips Screw	2
14	BB9504-00	3667837001	Tension Spring	1
15	BB9504-00	5670695001	Cotter Pin	1
16	BB9504-00	5670694001	Pin Roll	1
17	BB9504-00	5610972001	Hex Socket Round Head Screw+Toothed Lock Washer +Big Washer Assy	1
18	BB9504-00	3580456001	Bushing	1
19	BB9504-00	3708773001	Tension Bracket	1
20	BB9504-00	5610970001	Phillips Screw + Washer Assy	1
21	BB9504-00	3708769001	Cog Belt Guard Cover	1
22	BB9504-00	5610969001	Phillips Screw + Special Locked Washer Assy	2
23	BB9504-00	3800220001	Cog Belt	1
24	BB9504-00	3570369001	Driven Pulley	1
25	BB9504-00	5610966001	Phillips Screw + Spring Pad Assy	3
26	BB9504-00	3522121001	Bearing Base	1
27	BB9504-00	5610967001	Phillips Screw + Spring Pad + Washer Assy	3
28	BB9504-00	5640503001	Hex Cylinder Screw	1
29	BB9504-00	3708772001	Belt Cover	1
30	BB9504-00	5630493001	Hex Nut	2
31	BB9504-00	5610971001	Phillips Screw + Spring Pad + Washer Assy	2
32	BB9504-00	3708771001	Belt cover Cupport Plate	1
33	BB9504-00	5610968001	Hex Cylinder Screw+ Spring Pad + Washer Assy	1
34	BB9504-00	3708774001	Bracket Support	1
35	BB9504-00	3403441001	Table Locking Handle	1
36	BB9504-00	4861118001	Earthing conductor	1
37	BB9504-00	4190085001	Capacitor	1
38	BB9504-00	3708770001	Capacitor Support	1
39	BB9504-00	5610964001	Phillips Screw + Spring Pad + Washer Assy	5
40	BB9504-00	5610959001	Phillips Screw	3
41	BB9504-00	3570371001	Motor Arbor Wheel	1

No.	Product Model#	Part Number	Description	Qty
42	BB9504-00	5610963001	Hex Bolt+Spring Pad Assy	3
43	BB9504-00	5610955001	Phillips Screw	2
44	BB9504-00	3134054001	Retainer	1
45	BB9504-00	3134055001	Clamp plate	1
46	BB9504-00	4810408001	Cord	1
47	BB9504-00	3134022001	Retainer	1
48	BB9504-00	3134019001	Dust Hood	1
49	BB9504-00	5610956001	Phillips Screw	2
50	BB9504-00	5650987001	Toothed Lock Washer	2
51	BB9504-00	5610965001	Phillips Screw + Spring Pad + Washer Assy	2
52	BB9504-00	3134017001	Wheel Box	1
53	BB9504-00	3555972001	Disc	1
54	BB9504-00	5610962001	Hex Socket Round Head Screw+Toothed Lock Washer Assy	1
55	BB9504-00	3708768001	Disc Cover	1
56	BB9504-00	5610958001	Phillips Screw	2
57	BB9504-00	3708767001	Base Cover	1
60	BB9504-00	2245836001	Table Scale Label	1
201	BB9504-00	2829262001	Driven roller Assy	1
202	BB9504-00	2829264001	Driving Roller Assy	1
203	BB9504-00	2829267001	Index board Assy	1
204	BB9504-00	2829265001	Table Assy	1
205	BB9504-00	2829266001	Motor Assy	1
206	BB9504-00	2829270001	Switch Assy	1